 


BOXY INSTALLATION INSTRUCTIONS

BATTEN

EVOLVE
LIGHTING



BEFORE YOU START

IMPORTANT: Read all instructions before installing fixtures. Retain for future reference.

SAFETY: For your safety, this fixture must be wired in accordance to local electrical regulation, and to the fixtures specific power requirements and attributes. All work should be done by a qualified electrician or installer.

WARNING: Make certain power is **OFF** from the electrical panel before starting installation or attempting any maintenance.

MODEL INFORMATION

CODE	POWER	LUMEN OUTPUT	DIMENSIONS	WEIGHT
BOXY1500-50-8456	50W	7,000lm	1503x68x68mm	1.75kg
BOXY1200-40-8456	40W	5,600lm	1203x68x68mm	1.56kg

* Wattage set out of the factory, see chart on page 2 for full list of wattages and outputs

TECHNICAL SPECIFICATIONS

Mains Voltage	AC200-240V / 50-60 Hz	IP Rating	IP20
Surge Data	L-N:1kV, L/N - PE: 2kV	IK Rating	IK08
Flicker-free	Pst LM <1, SVM <0.4	Certifications	SAA
Operating Temp	0° to +40°C	Warranty	5 Year product replacement

MAX CIRCUIT BREAKER

Code	Inrush Current	Time	Circuit Breaker type	C10	C16	B10	B16
BOXY1500-50-8456	≤45A	200μs	Max. No. of drivers	17	28	10	17
BOXY1200-40-8456	≤32A	200μs		21	35	13	21

WARRANTY INFORMATION

This luminaire is warranted for a period of 5 years from the date of purchase. The backup battery pack in the emergency version is warranted for a period of 24 months. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered within any way.

Please see website for terms and conditions.

 
BOXY BATTEN

TECHNICAL DETAILS

CCT DIP SWITCH

BOX CONTENTS

CCT SWITCH



CW NW WW

CW = 6000K

NW = 5000K


WW = 4000K

**Use of CCT switch and
dip switch only after mains off**



- Light Fitting
- Instruction Manual
- Fixing Kit

DIMENSIONS

 BOXY1200-40-8456



BOXY1500-50-8456

  

BOXY BATTEN

INSTALLATION INSTRUCTIONS


INSTALLATION

1




Isolate the circuit

2

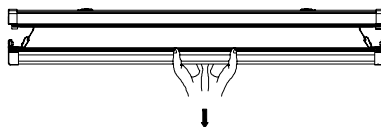

Separate the light base from the diffuser


3

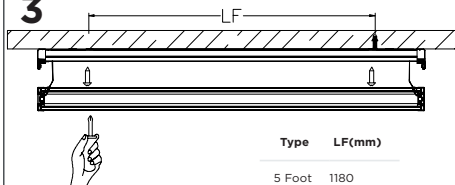

Type	LF(mm)
5 Foot	1180
4 Foot	880

Secure the base to the desired surface using the fixing kit provided (3 & 4)


4

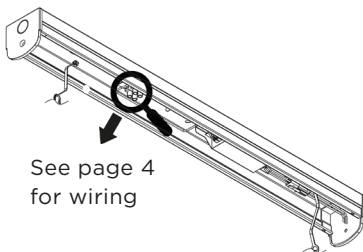



See page 4
for wiring

Route the mains cable through desired entry and wire as per diagram shown on page 4

5

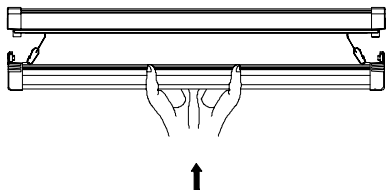

  Re-fit the diffuser by pushing until you hear a click then using a flat head screw driver rotate the locking dial to the lock position. Switch power back on



BOXY BATTEN

WIRING

ELECTRICAL CONNECTION WIRING

STANDARD

